 
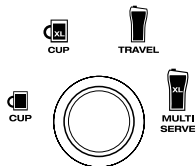 


Please make sure to read the enclosed Ninja® Owner's Guide prior to using your unit.

NINJA PERFECT CLEAN TECHNOLOGY

All you need is a little maintenance and you'll enjoy delicious coffee, mug after mug.

PHASE 1: CLEAN CYCLE - Will take 15 minutes to complete.



1. CLEAN light illuminates on the unit.

2. Fill reservoir to Max Fill line with descaling solution* and water or white vinegar** and water.

3. Place largest available empty vessel under brew basket.

4. Select brew size to match vessel used in step 3.





5. Press CLEAN button.

6. Unit will discharge enough descaling mixture to fill vessel. **DO NOT** touch any buttons at this time. Unit may dim.

7. Unit will beep 5 times when complete and CLEAN light will turn off.

Repeat steps 3-7 until reservoir is empty.

PHASE 2: FLUSH CYCLE - Complete once the Clean Cycle has finished.

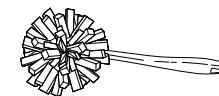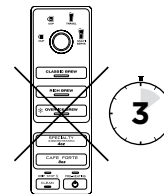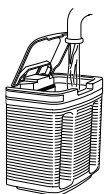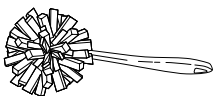

8. Empty and clean the reservoir.†

9. Fill reservoir to Max Fill line with water only.

10. Place empty vessel under brew basket.

11. Select brew size to match vessel used in step 10, then press Classic Brew.

12. Unit will discharge enough water to fill vessel. **DO NOT** touch buttons during this time.

13. Empty and clean vessel and reservoir.†

Repeat steps 10-12 until reservoir is empty.

*Descaling solution is available from ninjakitchen.com. Follow your solution's recommended concentration level.

**Fill the water reservoir to the Travel Mug line (16 oz.) with white vinegar, then add water to Max Fill line.

†CAUTION: Do not immerse coffeemaker in any liquid.