

WARRANTY

DO NOT RETURN YOUR PRODUCT TO THE STORE. PLEASE CONTACT BABY TREND FOR REPLACEMENT PARTS, SERVICE AND REPAIR.

The Baby Trend® warranty covers workmanship defects within the first 180 days of purchase. Any product which has been subjected to misuse, abuse, abnormal use, excessive wear and tear, improper assembly, negligence, environmental exposure, alteration or accident, or has had its serial number altered or removed invalidates all claims against the manufacturer. Any damage to property during installation is the sole responsibility of the end user. The Customer Service Department can be contacted at 1 (800) 328-7363 Monday through Friday between 8:00am and 4:30 pm (PST). Return Authorizations are required prior to returning product(s) to Baby Trend®. Warranty only valid in North America.

GARANTIA

NO DEVUELVA SU PRODUCTO A LA TIENDA. POR FAVOR CONTACTE A BABY TREND PARA PIEZAS DE REPUESTO, SERVICIO Y REPARACION.

La garantía de Baby Trend® cubre defectos de fábrica dentro de los primeros 180 días de la compra. Cualquier producto que haya sido sometido a uso indebido, abuso, uso anormal, desgaste excesivo, montaje incorrecto, negligencia, exposición ambiental, alteración o accidente, o que ha tenido su número de serie alterado o removido anula todos los reclamos contra el fabricante. Cualquier daño a la propiedad durante la instalación es de la exclusiva responsabilidad del usuario final. El Departamento de Servicio al Cliente puede ser contactado a 1 (800) 328-7363 Lunes a viernes entre 8:00 am y 4:30 pm (PST). Un número de autorización es requerido antes de la devolución de los producto(s) a Baby Trend®.

Garantía válida sólo en América del Norte.

GARANTIE

NE PAS RETOURNER VOTRE PRODUIT AU MAGASIN. VEUILLEZ CONTACTER BABY TREND POUR DES PIÈCES DE RECHANGE, ENTRETIEN ET RÉPARATION.

La garantie Baby Trend® couvre les vices de fabrication dans les 180 jours suivant l'achat du produit. Tout produit qui a été soumis à un usage abusif, une utilisation anormale, une usure excessive, un montage incorrect, de la négligence, de l'exposition environnementale, de la modification ou un accident, ou a eu son numéro de série modifié ou supprimé annule toutes les réclamations contre le fabricant. Tout dommage à la propriété lors de l'installation est de la seule responsabilité de l'utilisateur final. Le service client peut être contacté au 1 (800) 328-7363 du lundi au vendredi 8 h – 16 h 30 (PST). Une autorisation sera nécessaire avant de retourner le produit à Baby Trend®. Garantie valable uniquement en Amérique du Nord.




Baby Trend, Inc.
1607 S. Campus Ave., Ontario, CA 91761

1-800-328-7363 (8:00am ~ 4:30pm PST)
www.babytrend.com

Read all instructions BEFORE assembly and USE of product.
KEEP INSTRUCTIONS FOR FUTURE USE.

Lea todas las instrucciones ANTES de armar y USAR el producto.
CONSERVE LAS INSTRUCCIONES PARA USO FUTURO.

Lisez toutes les instructions du manuel AVANT l'assemblage
ou L'UTILISATION de ce produit. CONSERVEZ CES
INSTRUCTIONS POUR RÉFÉRENCE ULTÉRIEURE.

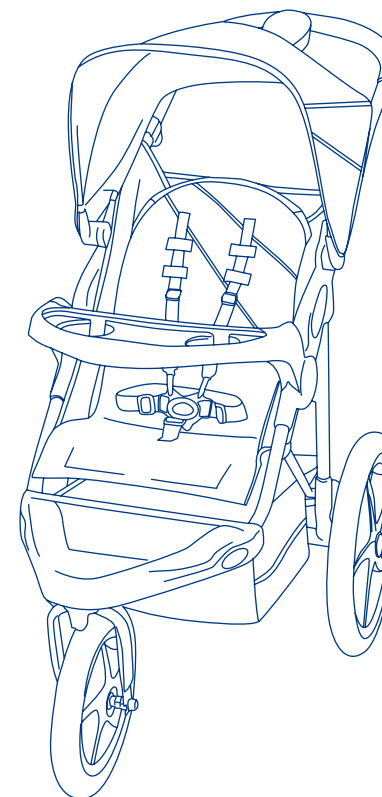


JG95
Instruction Manual
Manual de Instrucciones
Manuel d'instruction

baby trend
www.babytrend.com

English	2
Parts	2
Warning	3
Assembly	4
Safety	8
Infant Car Seat	11
Fold / Unfold	12
Maintenance	13
Espanol	14
Piezas	14
Advertencia	15
Montaje	16
Seguridad	20
Sillita Para El Automóvil	23
Plegar / Desplegar	24
Mantenimiento	25
Français	26
Pièces	26
Avertissement	27
Assemblage	28
Sécurité	32
Siège d'auto	35
Plier / Déplier	36
Entretien	37

Check that you have all the parts for this model before assembly.

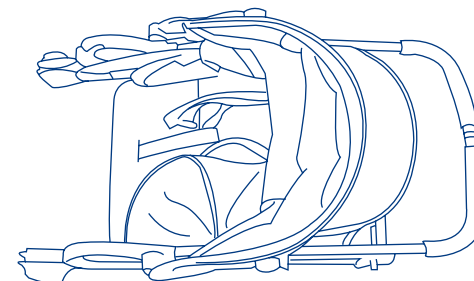

Stroller



Axel Nuts



Child Tray




Cup Holder



Retainer plate



Front Wheel

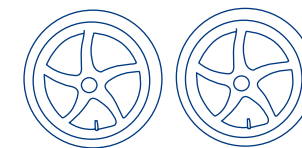

Rear Wheels

⚠️ WARNING: Please follow all of these instructions to ensure the safety of your child. Keep these instructions for future reference.

⚠️ WARNING: Failure to follow these instructions could result in serious injury or death. Avoid serious injury from falling or sliding out. Always use the safety harness and insure that the children are properly positioned according to these instructions.

⚠️ WARNING: Never leave children unattended.

- **CAUTION:** This single stroller is designed for one child only. Use with more than one child may cause the unbalance condition which can injure/ harm your child.
- Purses, shopping bags, parcels, diaper bags or accessory items may change the balance of the stroller and cause hazardous unstable conditions.
- The maximum weight that can be carried in the basket is 5 lbs (2.26 kg), child tray and parent tray are 3 lbs (1.36 kg) each. The maximum weight can be carried in the back pocket is 3 lbs (1.36 kg). Excessive weight may cause a hazardous unstable condition to exist.
- Be certain the stroller is fully erect and latched in the open position before allowing children near the stroller.
- Use of the stroller with children weighing more than 50 pounds (22.67 kg) or over 42 inches (106.7 cm) tall, will cause excessive wear and stress on the stroller and may cause a hazardous unstable condition to exist.
- **NEVER** use the stroller on stairways or escalators.
- **NEVER** use the stroller with roller skates, in-line skates, skateboards or bicycles.
- We recommend that the child occupant be at least 6 months of age prior to use of the stroller for jogging. Because children develop at different rates, please discuss the use of a jogging stroller with your health care provider prior to jogging with your child.
- **NEVER** allow your stroller to be used as a toy.
- To clean use only mild household soap or detergent and warm water on a sponge or clean cloth.
- Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed.
- Discontinue use of stroller should it malfunction or become damaged. Please contact our customer service Parts Hotline to arrange for repair or obtain replacement parts.

IMPORTANT! To ensure safe operation of your stroller, please follow these instructions carefully. Please keep these instructions for future reference.

IMPORTANT! Before assembly and each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. **NEVER** use if any parts are missing or broken.

IMPORTANT! Adult assembly is required.

Remove stroller from box. The front wheel and rear wheels **MUST** be installed prior to use.

FRONT WHEELS

To attach the front wheels, unfold stroller as described in the section following:

- 1) • Unlock the release lever (Fig. 1a).
Unfold stroller frame by pulling backward on the stroller handle. Lean the stroller backwards so that it rests on the handle and rear axle frame and the front wheel forks are pointing upward (Fig. 1b).
- 2) • Slide the front wheel onto the front forks (Fig. 2).

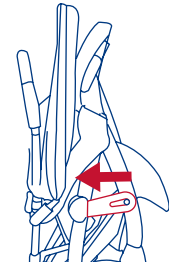


Fig. 1a

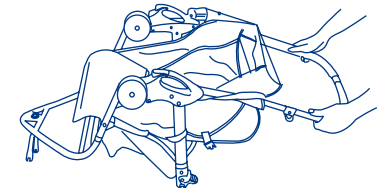


Fig. 1b



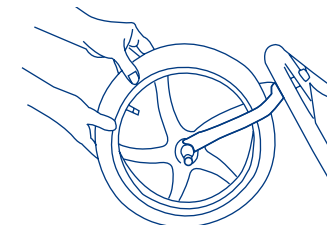


Fig. 2

- Slide the retainer plate onto the front wheel. Be sure that the raised lip is pointing toward the fork and insert it into the slot on the fork. The tab on the retainer plate must be lined up with the slot before tightening the wheel (Fig. 3).

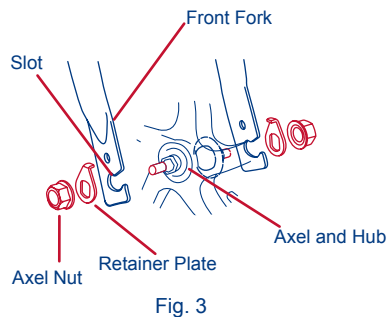


- With the wheel in position, tighten the axel nuts and tighten with standard crescent, box, or open end wrench. You should feel significant resistance and the wheel should be held tightly in place (Fig. 4).

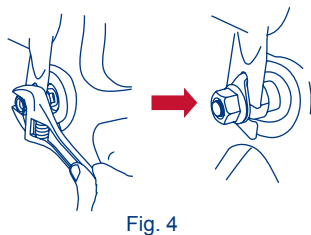

REAR WHEELS

- Rest the stroller upside down, on the handle.
- Press the rear wheel posts into the rear frame hub until it clicks into place (Fig. 5).
NOTE: Pull on the rear wheel to ensure that it is securely attached to the stroller.

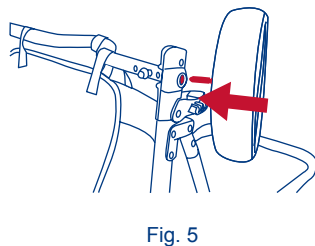


TIRES

- Tires are shipped un-inflated. The tires should be inflated on a regular basis to between 20 to 25 p.s.i. Always use a bicycle style hand air pump to inflate the tires (Fig. 6). *not included.



CUP HOLDER


- ⚠ WARNING:** To avoid burns, never put hot liquids in cup holder. Avoid possible tipping, do not place more than 1 lb. (0.45kg) in cup holder.

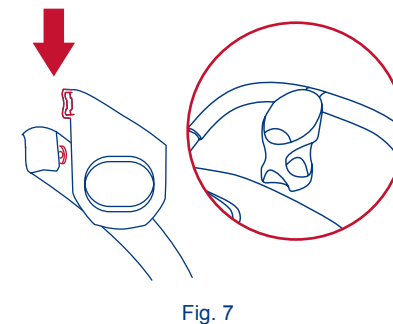

- To attach cup holder: slide the clip on the cupholder over Cup Holder tabs on the Handle Bar. Push until firmly in place (Fig. 7).



CANOPY

- To open the canopy: push forward on the front edge of the canopy while holding the rear of canopy in place (Fig. 8).
- To fold the canopy: pull backwards on the front edge (Fig. 8).

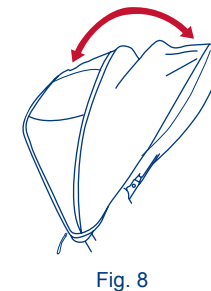

SEATBACK POSITIONING

- To recline the seat: loosen the strap through the buckle and adjust to the required recline position (Fig. 9a). To place the seat back in a more upright position, press upward on the seat back with one hand while pulling the strap through the buckle with the other (Fig. 9b).
Note: The upright position should be used only for a child that is at least 6 months old. Always re-adjust the safety harness, including the shoulder belts, when repositioning the seatback.

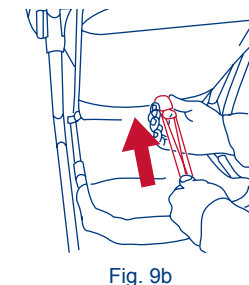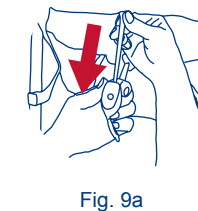

CHILD TRAY

⚠ WARNING: Do not place hot liquids or more than 3 pounds in the child tray. Serious burns or unstable conditions could result.

10) • **To attach the child tray:** Push the angled tray onto the post at the end of the right armrest, until locked into place (Fig. 10a).

• Rotate the tray downward until latched onto the left armrest (Fig. 10b).

Note: Check that the snap button comes through and securely latches the tray in place.

• **To access the child seat:** Press inward on left side tray release button and rotate upward on the tray (Fig. 10c).

• **To remove the child tray:** Press the release button and rotate the tray 180 degrees and pull the tray until it is released (Fig. 10d).

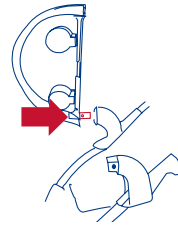


Fig. 10a

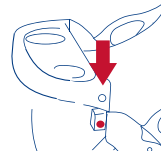


Fig. 10b

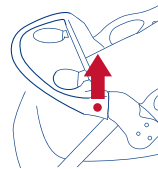


Fig. 10c

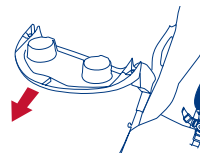


Fig. 10d

BASKET

11) • Insert the female end of the rear basket tube into the male ends located on the basket frame until it locks into place (Fig. 11).

Note: Stroller must be open first, before basket assembly.

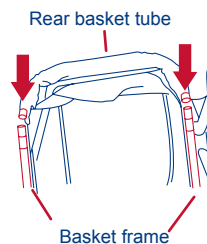


Fig. 11

BRAKES

⚠ WARNING: Always set brakes when the stroller is not being pushed so that the stroller will not roll away. NEVER leave stroller unattended on a hill or incline as the stroller may slide down the hill.

12) • To engage brakes, apply downward pressure to the brake levers located on the rear axle. The stroller may require forward or rearward movement in order to engage the brake (Fig. 12). Check that the stroller will not move once the brakes are properly applied. To release, gently lift up on the brake levers.

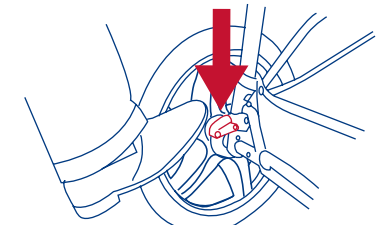


Fig. 12

FRONT WHEEL LOCK

⚠ WARNING: Always lock the front swivel wheel in STRAIGHT position before placing or removing your children from the stroller and when walking fast or jogging.

13) • The front wheels are equipped with a swivel locking device. Push the button on each wheel upward to engage the locks and push downward to disengage the locking device (Fig. 13).

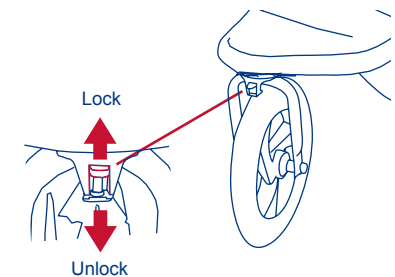


Fig. 13

TO SECURE THE CHILD

⚠ WARNING: Avoid serious injury from falling or sliding out. Always use the safety harness.

STRANGULATION

HAZARD: Child can strangle in loose straps. Never leave child in seat when straps are loose or undone

Type 1 and 2

14) • The shoulder straps of the 5-point harness have 3 attachment positions (Fig. 14a). Select the position that places the shoulder strap level with, or below the top of the child's shoulder (Fig. 14b).

• Carefully place the child in the stroller seat and bring the safety harness around the child's waist and over the shoulders. Place the crotch strap between the child's legs. Insert the male end of each shoulder/waist belt into the buckle on the crotch strap. Tighten the harness to be snug around the child's waist and over the child's shoulders (Fig. 14c).


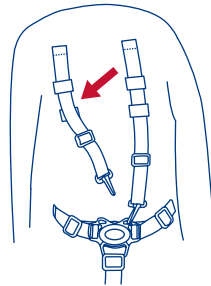


Fig. 14a

Type 1 Buckle

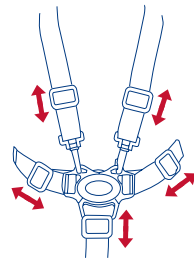

Adjust for a snug fit

Fig. 14b

Type 2 Buckle

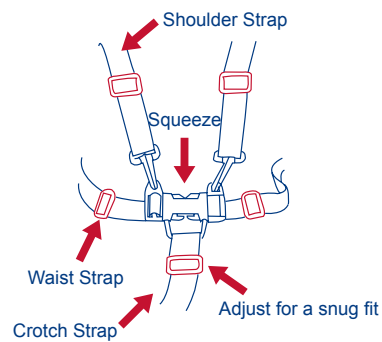


Fig. 14c

TO RELEASE THE CHILD

Type 1

15) • To release, push Button on Center Clasp, the two Harness Buckles will pop free (Fig. 15).

Type 2

16) • To release, apply pressure to both sides of each male clip until the clip is released (Fig. 16).

Type 1

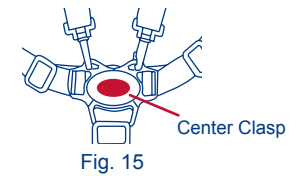


Fig. 15

Type 2

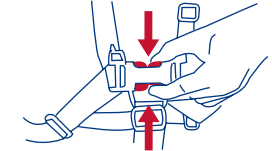


Fig. 16

JOGGING WITH YOUR STROLLER

⚠ WARNING: Never jog or run with your newborn in the car seat position. Use for strolling only.

When you are jogging with your child, use the following safety features:

17) • **LOCK THE FRONT SWIVEL WHEEL IN STRAIGHT POSITION** (Step 13)

• **SAFETY WRIST STRAP:** Always connect the safety strap to either wrist when jogging. This strap will keep the stroller from rolling away in the event that you trip while running (Fig. 17a). The safety strap must remain connected to the rear lower frame cross member at all times. This location is intended to prevent the stroller being tipped backward in the event that you do fall to the ground. The safety strap includes a hook and loop attachment for storage, on the left side of the stroller, when not in use (Fig. 17b).

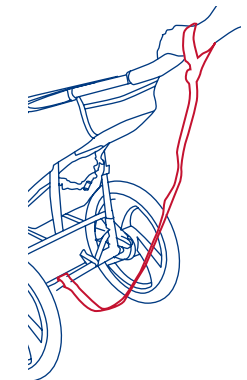


Fig. 17a

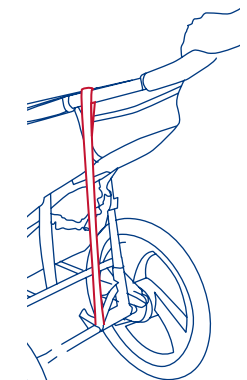


Fig. 17b

INFANT CAR SEAT ATTACHMENT

⚠ WARNING: Never jog or run with your newborn in the car seat position. Use for strolling only.

⚠ WARNING: Avoid serious injury from falling or sliding out, always use the Infant Car Seat harness.

18) • Fully recline seat back and turn car seat Support Tabs on the stroller frame (Fig 18a).
Note: Car Seat Support Tabs are **Only** used for the infant car seat. Check that the front child tray is firmly attached to the stroller armrests.

• Position the infant car seat so that it faces toward the rear of the stroller and the seat shell goes into the front tray and latches into place (Fig. 18b).

• When the infant car seat is locked firmly into place, **strap the single Short Clip over the infant car seat** through the seat belt slot on the infant car seat (Fig. 18c).
Note: It is very important that the Short Clip is always tightly fastened around the infant car seat.

TO REMOVE INFANT CAR SEAT

19) • To remove the Infant Car Seat, disengage Short Clip and squeeze the release handle located at the foot-end of the seat and carefully lift upward on the seat (Fig. 19).

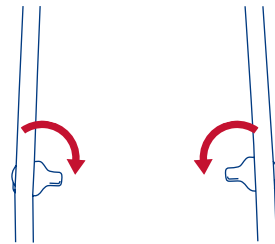


Fig. 18a

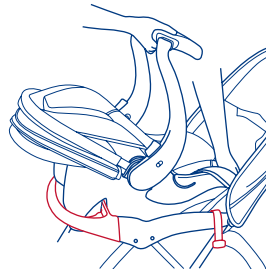


Fig. 18b

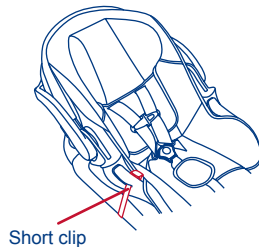


Fig. 18c

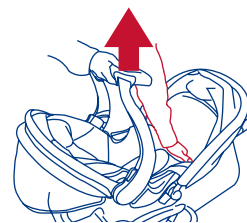


Fig. 19

TO FOLD STROLLER

⚠ CAUTION: Do not allow children near stroller while folding.

20) • Close the canopy as described in the canopy section. Recline seat by releasing buckle as described in seatback positioning section.

• The stroller is folded by simultaneously pulling each trigger (Fig. 20a). When the fold latches are released, the handle will begin to fall toward the floor. Release the trigger and press downward on the stroller handle until the stroller is completely folded. Secure the stroller in the folded position by locking the fold latch, located on the right side of the stroller, over the rivet that protrudes from the frame (Fig. 20b).

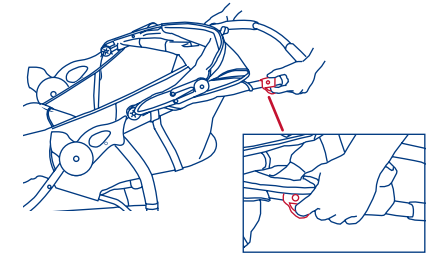


Fig. 20a

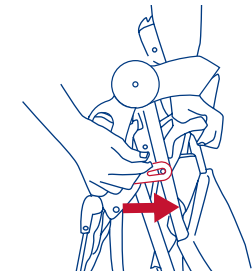


Fig. 20b

TO UNFOLD STROLLER

⚠ CAUTION: Do not allow children near stroller while unfolding.

21) • Release the folding latch, which is located on the right side (Fig. 21a).

• Lift up on the stroller handle with both hands until the stroller frame is locked in the open position (Fig. 21b). The stroller has spring-loaded latches on both sides of the frame. Test that both latches are fully engaged prior to placing child in the stroller.

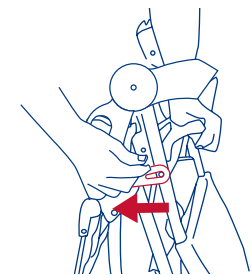


Fig. 21a

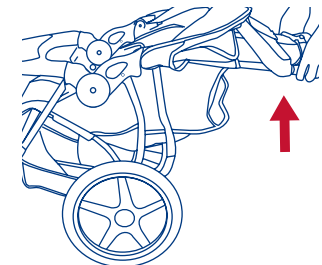


Fig. 21b

CARE AND MAINTENANCE

TESTING FOR PROPER WHEEL INSTALLATION

⚠ WARNING: ALWAYS check the double nut locking system before each use to ensure that the front wheel is securely fastened to the frame.

- 22) • Lift the front wheel off of the ground and sharply strike the top of the tire (Fig. 22). The wheel should not be loose or come off.

If you experience front wheel wobble that is beyond what is normal for use while walking or jogging you may have to adjust the front wheel housing nut.

- 23) • Remove footrest to access nut. You can use a standard crescent wrench to tighten the nut (Fig. 23). **DO NOT OVER TIGHTEN** this can cause damage to the wheel housing.

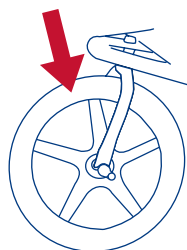


Fig. 22

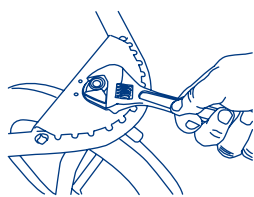


Fig. 23

FENDER

If adjustment or replacement is necessary:

- 24) • Line up the front fender and press onto the front frame assembly (Fig. 24a).
 - Insert the 4 screws through the underside of the front frame assembly into the front fender's plastic tubes. Tighten the screws only until snug (Fig. 24b). **DO NOT OVER TIGHTEN.**

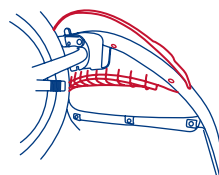


Fig. 24a

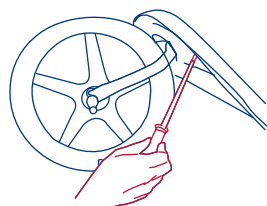


Fig. 24b


SEAT PAD

- To clean the seat pad, use only mild household soap or detergent and warm water on a sponge or clean cloth.

OTHER

- Check your stroller for loose screws, worn parts, torn material or stitching on a regular basis. Replace or repair parts as needed.

Verifique que tenga todas las piezas para este modelo antes de montar el carrito.

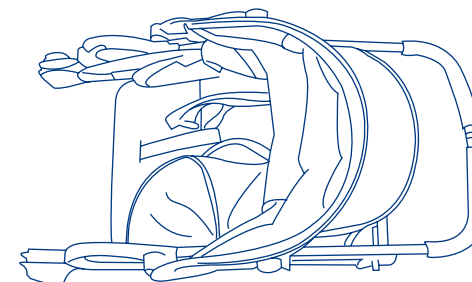

Carrito



Tuerca del Eje



Bandeja para niños




Portavasos



Placa de retención



Rueda delantera

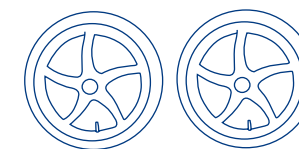

Ruedas traseras